



使用说明书 Instructions

1. 特征说明

- 显示月、日、星期、时、分、秒
- 可选择12及24小时
- 1/100秒计时及分段计时
- 每小时报时
- 每日定时响闹及自动重响功能

2. 秒表说明:

按A键直至秒表显示,若秒表不为零,按B键停止计时,按C键复位到零。

I、简易计时:

按B键开始计时;
再按B键,停止计时;
(重复按B键,重复开始/停止)
停止计时后按C键复位到零。

II、分段计时:

按B键开始计时;
按C键显示分段时间,注意内部计时持续;再按C键,在累加时间的基础上恢复计时;
按B键停止计时;
按C键复位到零。

III、两段时间显示:

按B键开始计时;
按C键显示第一段时间;
按B键停止第二段时间;
按C键显示第二段时间;
再按C键复位到零。

3. 时间、日历、星期、响闹显示

按A键直至显示正常走时,按B键显示月、日和星期;按C键显示响闹时间,同时按住B键和C键响闹取消/保持。

4. 设置时间、日历

在正常走时状态下按“A”键三次。正常走时的秒及星期在闪烁。这样进入了时间设置状态,按“B”键设置数字。(按住不放,可快速设置数字)按“C”键,选择秒、分、时、日月、星期。(A/P为12小时制,“A”代表为上午,“P”代表为下午,“H”为24小时制)作为调较对象,调较完毕,按“A”键回到时间显示状态。

5. 设置响闹时间:

在正常走时状态下按“A”键两次。时和星期在同时闪烁。这样进入了响闹设置状态,按“C”键选择“时”和“分”,按“B”键改变“分”和“时”数值。按“A”键回到时间显示。按“C”键,同时按“B”键,定闹符号“⌚”出现或者消失“----”表示定闹保持或者取消。

6. 自动重响:

在响闹时,按“B”键进入重响状态。即5分钟后,响闹自动重响。

7. 每小时报时:

在按“A”键直至显示正常走时;按“C”键后;同时按“A”键,每小时报时之功能可“取消”/“保持”。在保持状态,星期指标会全部显示。

8. 注意事项:

1. 避免受潮
2. 避免与腐蚀性物体接触
3. 避免在温度过高或过低的环境下使用
4. 不宜长时间在太阳下曝晒和置于强光下照射
5. 如产品在使用中出现故障,请与经销商或工厂联系

HOURLY CHIME

WHEN PRESSING C AND THEN PRESS A CAN TURN ON OR OFF THE HOURLY CHIME FUNCTION. WHEN CHIME IS ON, ALL DAY FLAG WILL SHOW UP

SNOOZE FUNCTION

WHEN ALARM IS SOUNDING, ONE PRESS OF B WILL ENTER THE STOPWATCH INTO SNOOZE FUNCTION. IT MEANS THAT ALARM WILL SOUND AGAIN AFTER 5 MINUTES UNLESS IT IS DISABLED BY ONE PRESS OF C.

SITTING OPERATION

ALARM TIME

- PRESS A TWICE TO GET ALARM TIME 'HOUR' FLASHING. PRESS B TO ADVANCE (HOLD B FOR FAST ADVANCE), THE ALARM WILL BE ENABLE AUTOMATICALLY
- PRESS C ONCE TO GET ALARM TIME 'MINUTE' FLASHING, PRESS B TO ADVANCE (HOLD B FOR FAST ADVANCE), THE ALARM WILL BE ENABLE AUTOMATICALLY
- LASTLY, PRESS A TO RETURN TO NORMAL TIME DISPLAY

CHRONOGRAPH

PRESS A ONCE TO GET INTO 'CHRONO' MODE

| | | |
|-----------------------------|--------------------------|------------------|
| PRESS | SPLIT | 1-2 FINISH |
| B-START | B-START | B-START |
| B-STOP | C-SPLIT | C-STOP NO.1 TIME |
| (REPEAT B TIME-IN/TIME OUR) | C-RELEASE | B-STOP NO.2 TIME |
| C-RESET | (REPEAT C, C ESCH SPLIT) | (SEE NO.1 TIME) |
| | B-STOP | C-RELEASE |
| | C-RESET | (SEE NO.2 TIME) |
| | | C-RESET |

ALARM FUNCTION

THE FUNCTION OF THE ALARM CAN BE ENABLE OR DISABLE ALTERNATIVELY BY PRESSING C THEN B TOGETHER THE BELL & CONE WILL SHOW UP ON RIGHT UPPER CORNER, WHEN THE BELL & CONE IS ON AND ALARM WILL SOUND

THE ALARM WILL STOP ITSELF AFTER 60 SEC OR CAN BE SILENCED BY PRESSING C. IN EITHER CASE, THE ALARM WILL SOUND AGAIN SAME TIME THE NEXT DAY

HOURLY CHIME

FEATURES

1. HOUR, MINUTE, SEC, DAY OF THE WEEK, MONTH & DATE
2. CHRONOGRAPH 1/100 SEC WITH LAP/SPLIT CONTROL
3. DAILY ALARM WITH SNOOZE
4. 12/24 HOUR DISPLAY FOR USER'S OPTION
5. HOURLY CHIME

SWITCH CONTROL

- ONE PRESS OF C :ALARM TIME
- ONE PRESS OF B :MONTG & DATE
- ONE PRESS OF A :MODE CONTROL TO CHRONO FUNCTION
- FOLLOWING ONE PRESS OF A :ALARM SET MODE
- FOLLOWING ONE PRESS OF A AGAIN :NORMAL TIME SITTING MODE
- FOLLOWING ONE PRESS OF A AGAIN :NORMAL TIME DISPLAY

SITTING OPERATION

NORMAL TIME

- AT NORMAL TIME DISPLAY, PRESS A THREE TIMES TO GET NORMAL TIME SETTING MODE, 'SEC' WILL
- START FLASHING, PRESS B FOR SETTING SECOND TO ZERO
- FOLLOWING ONE PRESS OF C TO GET 'MIN' FLASHING AND B TO ADVANCE (HOLD B FOR FAST ADVANCE)
- FOLLOWING ONE PRESS OF C TO GET 'HOUR' FLASHING. PRESS B TO ADVANCE (HOLD B FOR FAST ADVANCE).
- FOLLOWING ONE PRESS OF C TO GET 'MONTH' FLASHING, PRESS B TO ADVANCE (HOLD B FOR FAST ADVANCE)
- FOLLOWING ONE PRESS OF C TO GET 'DAY OF WEEK' FLASHING, PRESS B TO ADVANCE (HOLD B FOR FAST ADVANCE)
- LASTLY, PRESS A ONCE TO RETURN TO NORMAL TIME SPL

12/24 HOUR SELECTON

WHILE SITTING 'HOUR' 12/24 HOUR READOUT MAY BE OBTAINED BY TURN AROUND CYCLE. I.E. AM/PM IN 2 HOUR FORMAT AND 'H' IN 24 HOURS FORMAT

