

JUMO GmbH & Co. KG
Delivery address: Mackenrodtstraße 14
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.
JUMO House
Temple Bank, Riverway
Harlow, Essex CM20 2DY, UK
Phone: +44 1279 635533
Fax: +44 1279 635262
Email: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.
6733 Myers Road
East Syracuse, NY 13057, USA
Phone: 315-437-5866
1-800-554-5866
Fax: 315-437-5860
Email: info.us@jumo.net
Internet: www.jumousa.com



JUMO MAERA S29 SW

Titanium level probe

Applications

Level and level measurements

- In a ballast water tank for ship building
- In the sewage sector
- In splash water containers for swimming pools
- In chloride-containing media

Brief description

The JUMO MAERA S29 SW level probe is used for the continuous hydrostatic level measurement in ventilated tanks. Measuring is carried out unaffected by electrical medium features or any foam formation.

Approvals are needed for particular ship building requirements and explosion protection.

The level probe can be readily used in depths from as low as 1 mWS and has been designed for application in liquids with media containing chlorides. These may be found in ship building, swimming pools, or water and sewage water management.

The surrounding pressure is compensated for using a cable with an integrated pressure equalization hose. The cost-optimized titanium level probe with a front-flush membrane offers an alternative in highly viscous media. The screwable protective cap protects the membrane.

The level probe is equipped with a reverse-polarity protection mechanism, which prevents incorrect polarity during startup.

Another benefit to the measuring system is the extensive range of accessories for an optimum design.

Further interesting information can be found in our brochure "Level Probes - Hydrostatic Level Measurement".



Type 404393

Customer benefits

- Improved plant availability
- Standardized signal processing
- Resistant to climate thanks to improved moisture and vibration protection
- Measurements in very harsh and highly viscous media thanks to the front-flush membrane
- Prevention of build up of resistance
- A complete solution for measurement points thanks to the extensive range of accessories
- Reverse-polarity protection mechanism

Special features

- Highly resistant to chemicals thanks to the titanium version
- Measuring ranges from 100 mbar relative pressure and 600 mbar absolute pressure are available
- Explosion protection according to ATEX
- Approved for use in ships according to GL
- Proven piezoresistive silicon sensor

Approvals/approval marks



JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex CM20 2DY, UK
 Phone: +44 1279 635533
 Fax: +44 1279 635262
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: 315-437-5866
 1-800-554-5866
 Fax: 315-437-5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com



Technical data

General Information

Reference conditions	According to DIN 16086 and DIN 61298
Measuring principle	Piezoresistive sensor with titanium membrane
Pressure transfer medium	Synthetic oil
Admissible load changes	> 10 million, 0 % to 100 % measuring range
Mounting position	Vertical/hanging from the cable

Output

Analog output Current Output 405	4 to 20 mA, 2-wire
Step response T_{90}	2 ms
Burden Current 4 to 20 mA, 2-wire	$R_L \leq (U_B - 16 \text{ V}) \div 0.022 \text{ A } (\Omega)$

Auxiliary energy

Voltage Supply U_B^a	
For basic type 404393/000	DC 16 to 28 V (nominal 24 V)
For basic type 404393/062	DC 21 to 24 V (nominal 24 V)
For basic type 404393/362	DC 16 to 28 V (nominal 24 V)
For basic type 404393/662	DC 21 to 24 V (nominal 24 V)
Reverse voltage protection	Yes
Max. current consumption	23 mA
Electrical circuit	SELV

^a The voltage peaks must not exceed the specified voltage supply values!

Cable

6-core, shielded cable with integrated pressure compensation hose, AWG 24 with ferrules

Material	
Outer sheath	FEP
Compensation hose	PA
Color	Black
Outer diameter	Approx. 8.4 mm
Conductor cross section	0.25 mm ²
Bending radius	
Moving	min. 140 mm
Fixed	min. 70 mm
Tensile force	4000 N
Mass	≈ 90 g/m
Admissible temperatures	-40 to +70 °C (depending on the medium)
UV resistance	Yes, according to DIN ISO 4892-2

JUMO GmbH & Co. KG

Delivery address: Mackenrodtstraße 14
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.

JUMO House
Temple Bank, Riverway
Harlow, Essex CM20 2DY, UK
Phone: +44 1279 635533
Fax: +44 1279 635262
Email: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

6733 Myers Road
East Syracuse, NY 13057, USA
Phone: 315-437-5866
1-800-554-5866
Fax: 315-437-5860
Email: info.us@jumo.net
Internet: www.jumousa.com

**Mechanical features**

Ensure the medium durability of the material!

Material	PVC
Protective cap	Titanium grade 2
Process connection	Titanium grade 2
Measuring membranes	Titanium grade 2
Case	Titanium grade 2
Shrink tubing	Polyolefin
Mass (without cable)	109 g
Diameter	27 mm

Environmental conditions

Admissible temperatures	0 to 50 °C
Medium	The level probe must not freeze in the medium! A restriction may be required depending on the medium.
Storage	-20 to +70 °C, dry
Electromagnetic Compatibility ^a	Class B
Interference emission	Industrial requirements
Interference immunity	
Protection type ^b	IP68

^a According to EN 61326-2-3

^b According to EN 60529

Measuring range and accuracy

Measuring range	Linearity ^a	Accuracy at		Long-term stability ^b	Overload capacity	Burst pressure
bar	% MSP	20 °C ^c % MSP	10 to 50 °C ^d % MSP	% MSP per year	bar	bar
0 bar to 0.1 bar relative pressure	0.2	1.2	1.9	≤ 0.4	0.3	0.4
0 bar to 0.16 bar relative pressure	0.2	0.8	1.8		0.48	0.64
0 bar to 0.25 bar relative pressure	0.2	0.8	1.7	≤ 0.3	0.75	1
0 bar to 0.4 bar relative pressure	0.2	0.7	1.7		1.2	1.6
0 bar to 0.6 bar relative/absolute pressure	0.2	0.7	1.6	≤ 0.2	1.8	2.4
0 bar to 1 bar relative/absolute pressure	0.2	0.6	1.3		3	4
0 bar to 1.6 bar relative/absolute pressure	0.25	0.5	1.3		4.8	6.4
0 bar to 2.5 bar relative/absolute pressure	0.25	0.5	1.2		7.5	10
0 bar to 4 bar relative/absolute pressure	0.25	0.5	1.2		12	16
0 bar to 6 bar relative/absolute pressure	0.25	0.5	1.2		18	24
0 bar to 10 bar relative/absolute pressure	0.25	0.5	1		30	40

^a Linearity according to limit point setting

^b Reference conditions EN 61298-1

^c Includes: linearity, hysteresis, repeatability, deviation from measuring range start (offset), and measuring range end

^d Includes: linearity, hysteresis, repeatability, deviation from measuring range start (offset) and measuring range end, thermal influences on measuring range start (offset), and measuring span

JUMO GmbH & Co. KG

Delivery address: Mackenrodtstraße 14
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.

JUMO House
Temple Bank, Riverway
Harlow, Essex CM20 2DY, UK
Phone: +44 1279 635533
Fax: +44 1279 635262
Email: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

6733 Myers Road
East Syracuse, NY 13057, USA
Phone: 315-437-5866
1-800-554-5866
Fax: 315-437-5860
Email: info.us@jumo.net
Internet: www.jumousa.com

**Approvals/approval marks**

Approval mark	Testing agency	Certificates/certification numbers	Inspection basis	Valid for
EX	At preparation stage			Type 404393/362 Type 404393/662
GL	DNV GL	42 062 - 15 HH	GL Guidelines, Chapter 2, Edition 2012	Type 404393/062
	At preparation stage			Type 404393/662

JUMO GmbH & Co. KG

Delivery address: Mackenrodtstraße 14
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.


JUMO House
Temple Bank, Riverway
Harlow, Essex CM20 2DY, UK
Phone: +44 1279 635533
Fax: +44 1279 635262
Email: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

6733 Myers Road
East Syracuse, NY 13057, USA
Phone: 315-437-5866
1-800-554-5866
Fax: 315-437-5860
Email: info.us@jumo.net
Internet: www.jumousa.com



Dimensions

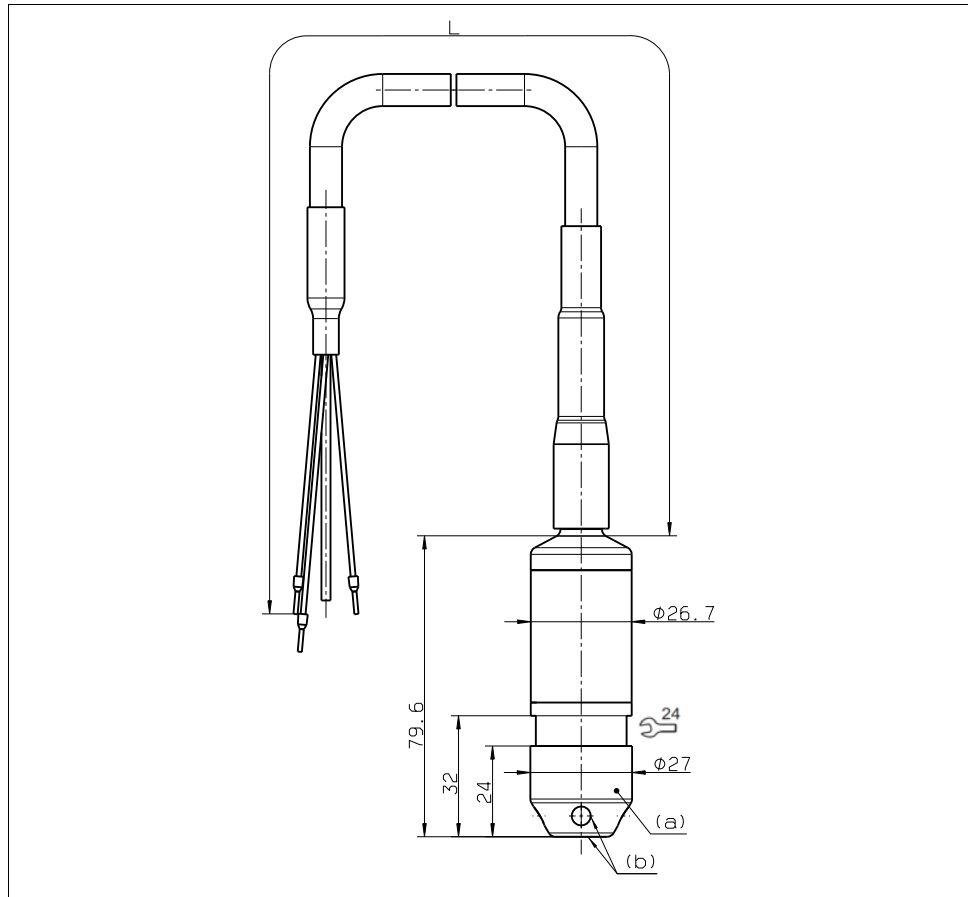

L Cable length according to customer preference

(a) Protective cap

(b) 5 bore holes for every Ø 5 mm

JUMO GmbH & Co. KG

Delivery address: Mackenrodtstraße 14
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.

JUMO House
Temple Bank, Riverway
Harlow, Essex CM20 2DY, UK
Phone: +44 1279 635533
Fax: +44 1279 635262
Email: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.


6733 Myers Road
East Syracuse, NY 13057, USA
Phone: 315-437-5866
1-800-554-5866
Fax: 315-437-5860
Email: info.us@jumo.net
Internet: www.jumousa.com



Accessory dimensions


Cable clamp

Part no. 00061389

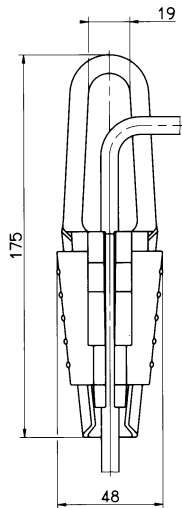

Terminal box with pressure compensation


Part no. 00061206

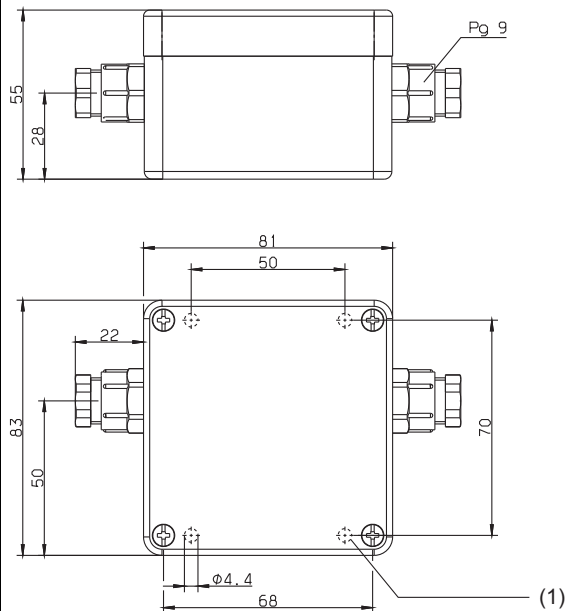

(1) Fastening hole

Sealing screw

Part no. 00333329

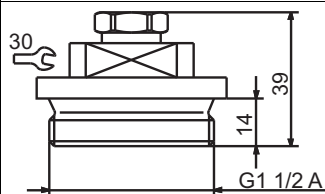



Connection diagram


The connection diagram in the data sheet provides preliminary information about the connection options. For the electrical connection only use the installation instructions or the operating manual. The knowledge and the correct technical execution of the safety information/instructions contained in these documents are mandatory for installation, electrical connection, startup, and for safety during operation.

Connection		Terminal assignment
		
		Cable
4 to 20 mA, 2-wire		
Rated voltage supply DC 24 V	U_B/S^{+a} 0 V/S-	White Gray
Shielding		
Caution: Ground the device!		Black
Ground all connected devices (such as pumps and valves) to the same potential!		

^a The voltage peaks must not exceed or fall below the specified voltage supply values!

Connection example

Current output

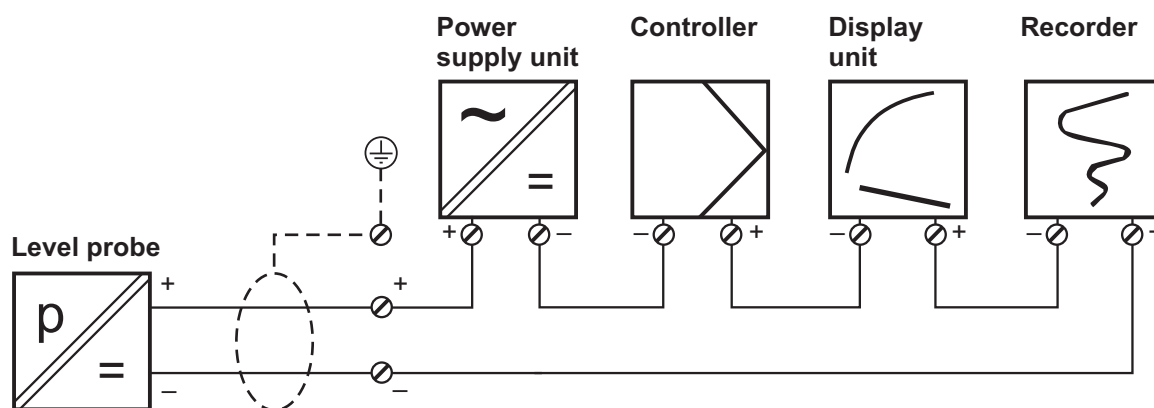

JUMO GmbH & Co. KG

Delivery address: Mackenrodtstraße 14
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.

JUMO House
Temple Bank, Riverway
Harlow, Essex CM20 2DY, UK
Phone: +44 1279 635533
Fax: +44 1279 635262
Email: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

6733 Myers Road
East Syracuse, NY 13057, USA
Phone: 315-437-5866
1-800-554-5866
Fax: 315-437-5860
Email: info.us@jumo.net
Internet: www.jumousa.com



Order details

(1) Basic type	
404393	JUMO MAERA S29 SW – Titanium level probe
(2) Basic type extension	
000	None
062	GL approval
362	Explosion protection
662	GL approval and explosion protection
999	Special version
(3) Input	
414	0 to 100 mbar relative pressure
415	0 to 160 mbar relative pressure
417	0 to 250 mbar relative pressure
424	0 to 400 mbar relative pressure
419	0 to 600 mbar relative pressure
454	0 to 1 bar relative pressure
455	0 bar to 1.6 bar relative pressure
456	0 to 2.5 bar relative pressure
535	0 to 4 bar sealed gauge
536	0 to 6 bar sealed gauge
537	0 to 10 bar sealed gauge
487	0 bar to 0.6 bar absolute pressure
488	0 to 1 bar absolute pressure
489	0 to 1.6 bar absolute pressure
490	0 to 2.5 bar absolute pressure
491	0 to 4 bar absolute pressure
492	0 to 6 bar absolute pressure
493	0 to 10 bar absolute pressure
998	Special measuring range for absolute pressure ^a
999	Special measuring range for relative pressure ^a
(4) Output	
405	4 to 20 mA, 2-wire
(5) Process connection	
770	Front-flush process connection with protective cap
(6) Process connection material	
60	Titanium
(7) Electrical connection type	
25	FEP cable, black, shielded, UV-resistant
(8) Length of connecting cable	
005	5 m
010	10 m
020	20 m
030	30 m
040	40 m
050	50 m
060	60 m
070	70 m
080	80 m
090	90 m
100	100 m

